



## NOTES:


- 1. Dimensions are minimum.
- 2. Rubber tapes shall be rolled after application.
- 3. Between 1 free-end and 1 through conductor.
- 4. Between 2 free-end conductors.
- 5. Between 3 free-end conductors.

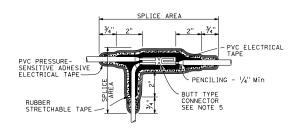


544

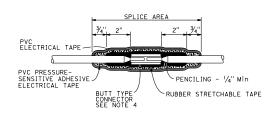

## TYPICAL SPLICE INSULATION METHOD B

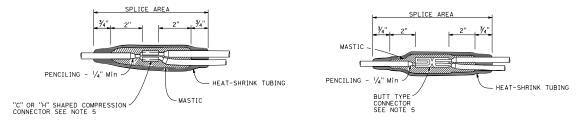



## TYPICAL SPLICE INSULATION HEAT-SHRINK TUBING

STATE OF CALIFORNIA
DEPARTMENT OF TRANSPORTATION

## ELECTRICAL SYSTEMS (SPLICE INSULATION METHODS DETAILS)

NO SCALE

ES-13A

1-26-